



EN

84206
Stylish battery-operated wireless doorbell - 150 m



1x 84206

1x

1x Manual

1x

1x CR2032 3V

Registering your warranty

To register your warranty, fill in the online form at www.chacon.com/warranty

0. Introduction

Thank you for using this product.

- Please read the instructions carefully before using the device.
- Do not attempt to dismantle or repair the product yourself as it will invalidate the warranty.

1. Introduction to the product




1.1. Installing the indoor and outdoor units

1.1.1. Place the battery in the pushbutton

- Open the device using a flat screwdriver.
- Insert the battery, taking care to observe correct polarity (+/-).
- Check that the gasket is correctly positioned before closing the unit.

1.1.2. Install the doorbell

- Remove the cover from the battery.
- Insert 2 x 1.5 V AA batteries (not included) in the battery compartment, checking that the polarity of the batteries is correct (+/-).

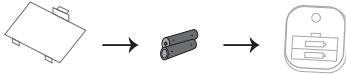

2. Use of the product

Once you have fitted the batteries to your indoor unit, there are just a few more steps before your new doorbell is working.

- Once the battery is in position, the receiver makes a "Ding Dong" sound to inform you that it has gone into pairing mode.
- You then have two minutes to synchronise the two units.
- Then press the transmitter button.
- If you hear a "Ding Dong", it means that the pairing process was successful.
- Select the volume and tune of your choice, and press the button again to save your selection.

3. Wall mounting

3.1. Outdoor unit (pushbutton)

Two options:

- Open the transmitter using a flat screwdriver and separate the front and back sections. Then, secure the rear section at an appropriate height on the wall using the two screws provided.



TIP: For the installation, you will need a drill and a Phillips screwdriver.

IMPORTANTE: Before drilling a hole in the wall, make sure that there are no cables or pipes that you could accidentally damage


- You can affix the transmitter at an appropriate height using double-sided adhesive tape (included)



NOTE: If you mount your pushbutton on a surface made of uPVC (polyvinyl chloride) or metal, please note that the transmission range will be reduced

3.2. Indoor unit (chime)

- Drill a hole in the wall at the desired height.
- Then insert a wall plug (included) into the hole.
- Then, insert a screw (included) into the wall plug.
- You can then hang the receiver.

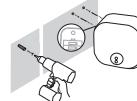

NOTE: The screw must not be completely inserted into the wall. You must retain sufficient length from the surface to hold the receiver (chime).

4. Changing the tune and the volume

If you want to change the tune and volume of your doorbell, simply press the appropriate buttons (see diagram) and press the button again to confirm your new selection.

5. Choose the mode which suits you

You can adjust the mode according to your needs by pressing the volume button. There are 4 options to choose from: High, medium, or low volume, and mute with flash.

6. Synchronise several devices

The process to synchronise a second pushbutton is exactly the same as the method explained above. You can connect up to eight pushbuttons to one doorbell. Once you add a ninth, the first one that was connected to your doorbell will automatically desynchronise.

NOTE: A pushbutton can be connected to as many doorbells as you wish.

7. Resetting the unit



If you want to delete your pairing, open the outdoor unit and press the small button when the receiver is in pairing mode. You will then hear a double "Ding Dong". This means that synchronisation was successful.

8. Linking the doorbell with a Dio 1.0 device

This product is compatible with all Dio 1.0 devices: pushbutton, remote control, switches, wireless detectors... This means that you can personalise your Dio installation according to your needs. For example, when someone rings your doorbell when you are out, your floor lamp, which you have synchronised with our Dio Connect sockets, will immediately light up to create a simulated presence.

More information on our website: <https://chacon.com/fr/>

9. Safety tips

- If you do not plan to use the unit for an extended period, such as when you are on holiday, please remove the battery from the transmitter.
- Keep new and used batteries out of the reach of children.
- If the battery compartment does not close properly, stop using the product and keep it out of the reach of the children.
- Incorrect use of the battery could damage nearby items and cause a fire or serious injuries.
- If you think batteries might have been swallowed, consult a doctor immediately. Swallowing a battery can have serious consequences: internal burns within two hours, or even death.
- Recycle used batteries in line with environmental protection regulations

10. Technical specifications

- Radio frequency: 433.92 MHz
- Transmission range: 150 m (free field)
- Four sound levels: high, medium, low, and mute with flash
- Choice of 38 tunes
- Flashing LED
- Weatherproof button (IP44)
- Battery (outdoor unit): 1 x DC 3 V CR2032 (included)
- Battery (indoor unit): 2 x 3 V AA (not included)
- Maximum radio-frequency power ≤ 20mW (EIRP)

— Direct current (DC)

For indoor use only.



Recycling
In accordance with European WEEE directives (2002/96/EC), any electrical/electronic device or accumulator must be collected separately by a local system specialising in the collection of such waste. Do not dispose of these products with ordinary waste. Check the regulations in force. The logo shaped like a waste bin indicates that this product must not be disposed of with ordinary household waste.

To prevent any risk to the environment or human health due to uncontrolled scrapping, recycle the product in a responsible manner. This will promote the sustainable use of material resources. To return your used device, use the return and collection systems, or contact the original dealer. The dealer will recycle it in accordance with regulatory provisions.



Chacon declares that device 84206 conforms with the requirements and provisions of Directive R&D 2014/53/EU.
The complete text of the EU declaration of conformity is available at the following Internet address:
www.chacon.com/conformity

Support

www.chacon.com/support

V1.0 201012